

POP ART

toaster™

2 SLICE TOASTER
CT-819R



PRODUCT SPEC: 100-120V 700W

USER INSTRUCTIONS

Please keep these instructions

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed. These include the following:

- **READ ALL INSTRUCTIONS**
- Do not place any part of this toaster in water or any other liquid.
- To protect against electrical shock do not immerse cord, plugs, or any wiring in water or other liquid.
- Prior to first use, the toaster should be used for a few minutes without bread in it. There might be some smoke or odor at first; this is entirely normal.
- Do not touch the hot surface. Use the handles or knobs.
- Unplug from outlet when not in use and before cleaning. **IMPORTANT: Allow to cool fully before removing or replacing image plates.**
- If the cord is damaged, it must be replaced by the manufacturer or by an authorised technical service.
- Do not use outdoors.
- Keep the toaster out of reach of children.
- Use only pre-sliced bread.
- Do not insert oversized foods, metal foil packages, or metal utensils into the toaster. This may result in **fire** or electric shock.
- Do not use the toaster near or below curtains, upholstery or other decorative fabrics, or other combustible materials as they can easily catch fire and cause a safety hazard. Bread may burn and must be watched.
- Do not remove food or image plates from the toaster while toaster is in use and the plunger is down.
- Do not remove the crumb tray while the toaster is plugged in. Disconnect from power supply, wait for it to cool, then remove the crumb tray.
- The temperature of accessible surfaces may be high when the appliance is operating.
- A short power-supply cord is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
 - a) If a longer detachable power-supply cord or extension cord is purchased separately, the marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance, and
 - b) The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment
- The use of accessory attachments not recommended by the appliance manufacturer may cause product failure or injuries.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Do not use appliance for other than intended use.
- Avoid contacting moving parts.

PLEASE KEEP THESE INSTRUCTIONS

Note this appliance is intended for household use only.

MAIN COMPONENTS

- A. start control
- B. frozen
- C. reheat
- D. cancel
- E. timing/heat control
- F. removable metal image plate
- G. hook
- H. crumb tray



OPERATION

- Place your toaster on a flat, dry, stable surface.
- Place one metal image plate into each bread slot.
 - a) the back of the image plate will face the inner wall of toaster.
 - b) the front of the image plate will face the bread
 - c) using the handle at top of plate, gently slide the plate into the metal guides and press down firmly
- Plug the toaster in, and adjust it to your required toasting time, using the Timing/heat setting control (E)
- Place bread or other food suitable for toasting into the slot, then press down the start control /plunger (A). It will remain down until the bread is toasted.

- For optimum toasted image, we recommend using setting 3-4. **Please note: though image can be toasted on all types of bread, the degree of branding will vary depending upon the type and size of bread used.**
- Though not imperative, we suggest removing the image plates when toasting bagels, waffles, pop tarts (please do not use iced pop tarts in toaster), etc. for better toasting on back side of food product.
- If you wish to stop the toasting process, press the Cancel button (D). This will automatically eject the toast, and cancel the heating elements.
- If the bread sticks in the toaster, unplug it, wait for it to cool, then remove the bread. **NEVER USE METAL UTENSILS TO REMOVE THE BREAD.**
- After use, slide open crumb tray and wipe away crumbs using a dry cloth.
- Always allow at least 1 minute's cooling time between cycles if toaster is being used more than once at a time.
- To remove or replace metal plates with an alternate image plate, please use the provided hook by latching onto handle and pulling gently upward through the guides. **Please note: image plate should not be touched with bare hands until toaster has cooled down completely. Use the enclosed hook or your oven mitt.**
- If the lead connecting the toaster to the power supply is damaged, it should only be replaced by a qualified service engineer or the toaster manufacturer.

CLEANING AND CARE INSTRUCTIONS – NOTE THE TOASTER SHOULD BE ALLOWED TO COOL COMPLETELY BEFORE CLEANING.

- Do not immerse in water.
- Unplug from the power outlet (mains).
- DO NOT use coarse or abrasive sponges/cloths or steel wool to clean the toaster.
- Never spray or apply cleaner directly onto or into the toaster – cleaner should be applied to a soft cloth.
- The outside of the toaster should be wiped with a soft, damp cloth, and polished with a soft, dry cloth.
- After cleaning, wait a few minutes for the toaster to dry completely before use.
- Any other servicing should be performed by an authorized service representative.